
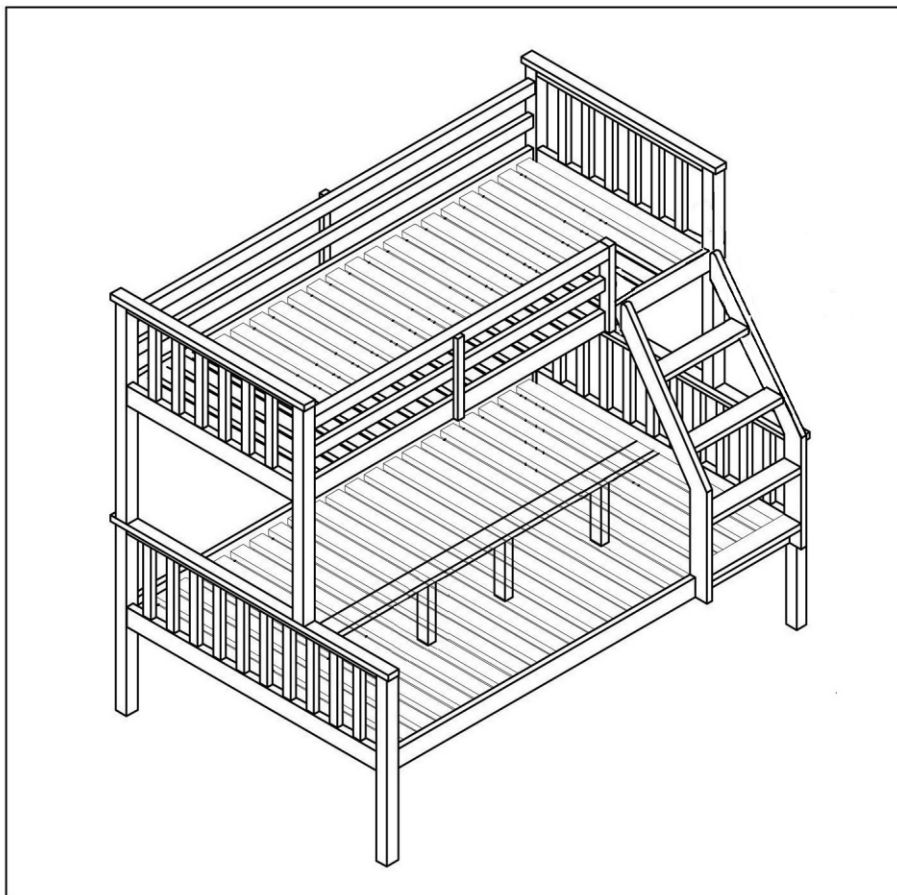
















# BAGIRA POSTEL'-Montážny návod


140x200cm, 90x200 cm

B1269W









<b>A</b>		16
	15mm M6x100 mm	
<b>B</b>		40
<b>C</b>		44
	Ø8x30mm	
<b>D</b>		02
<b>E</b>		66
	8mm Ø4x30mm	
<b>F</b>		16
	15mm M6x70mm	
<b>G</b>		38
	15mm M6x80mm	
<b>H</b>		05
	10mm Ø7x60mm	

<b>I</b>		02
	15mm M6x60mm	
<b>J</b>		06
	15mm M6x30mm	
<b>K</b>		04
	Ø 12 x 80mm	
<b>L</b>		10
	15mm	
<b>M</b>		02
	15mm M6x50mm	
<b>N</b>		02
<b>O</b>		08
	7mm Ø4x16mm	

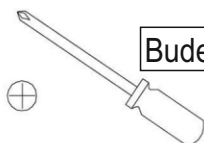



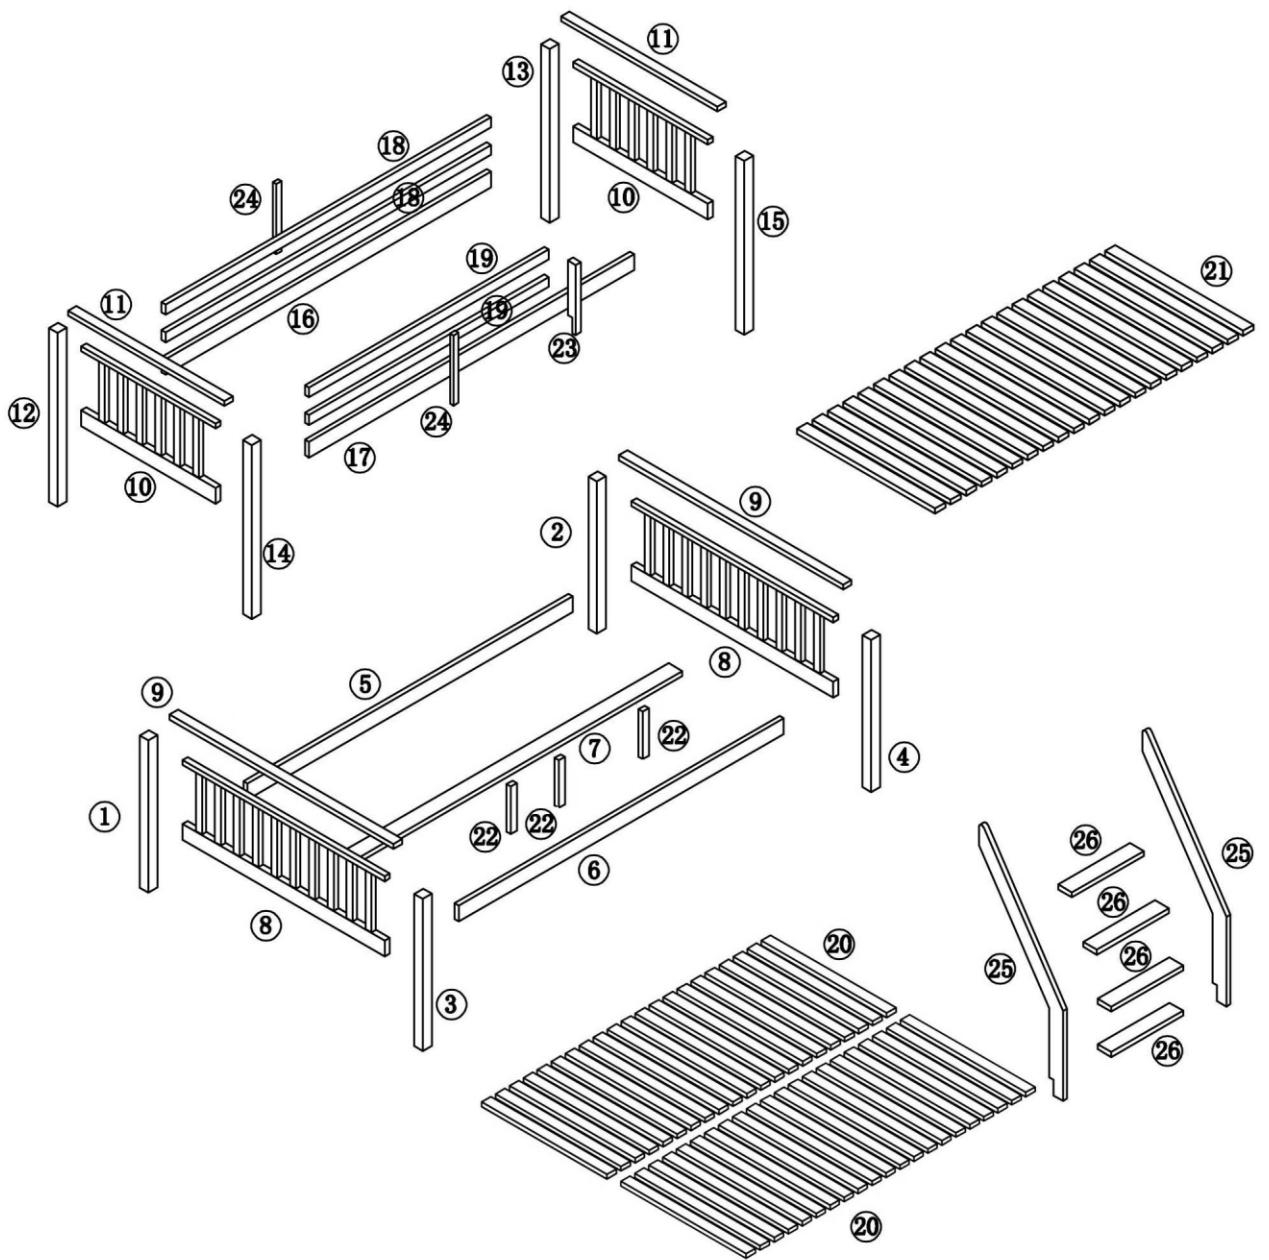

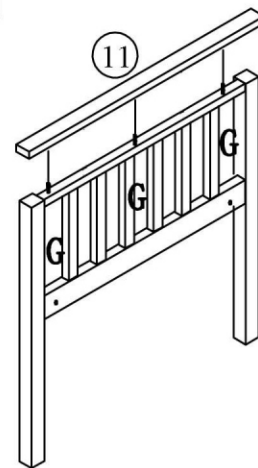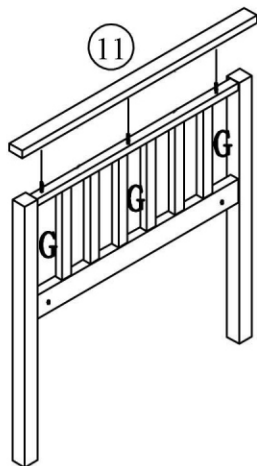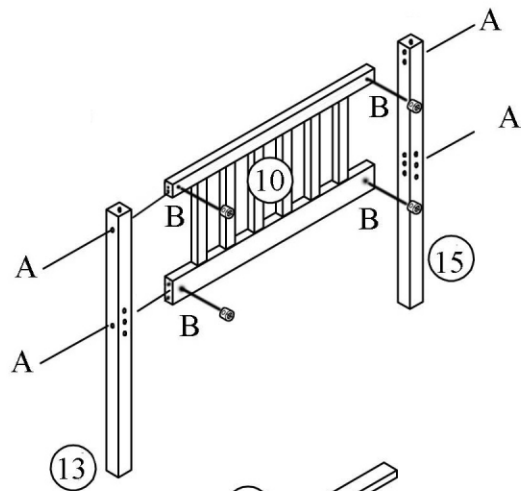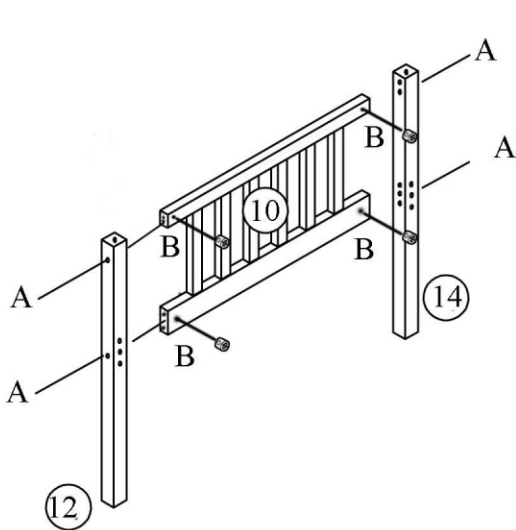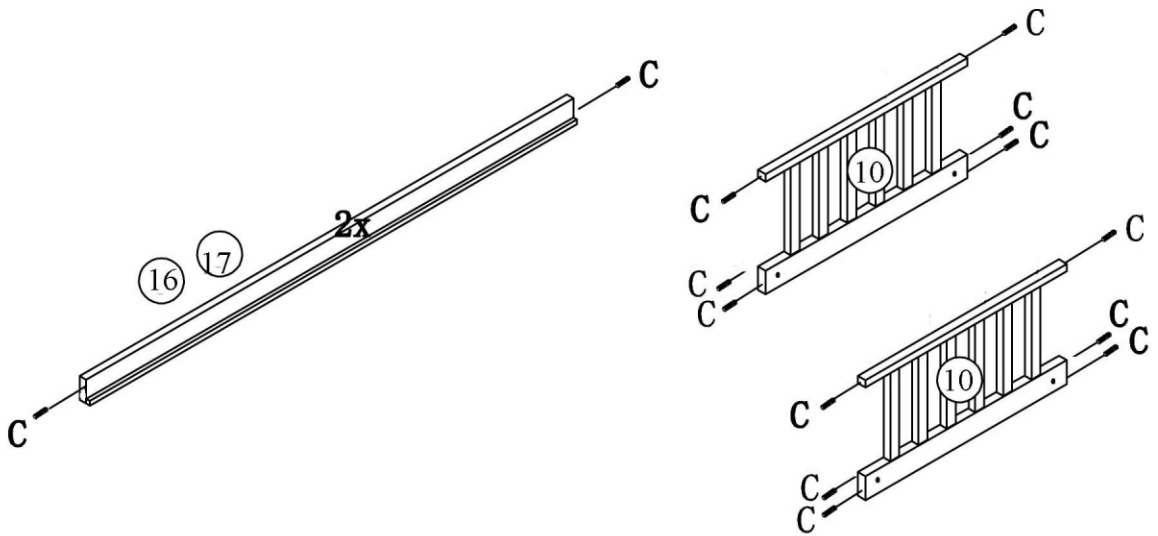Budete potrebovat'







**P 3/8**

<b>C</b>	 Ø8x30mm	<b>16</b>
----------	--	-----------


<b>A</b>	 15mm M6x100 mm	<b>08</b>
<b>B</b>		<b>08</b>
<b>G</b>	 15mm M6x80mm	<b>06</b>

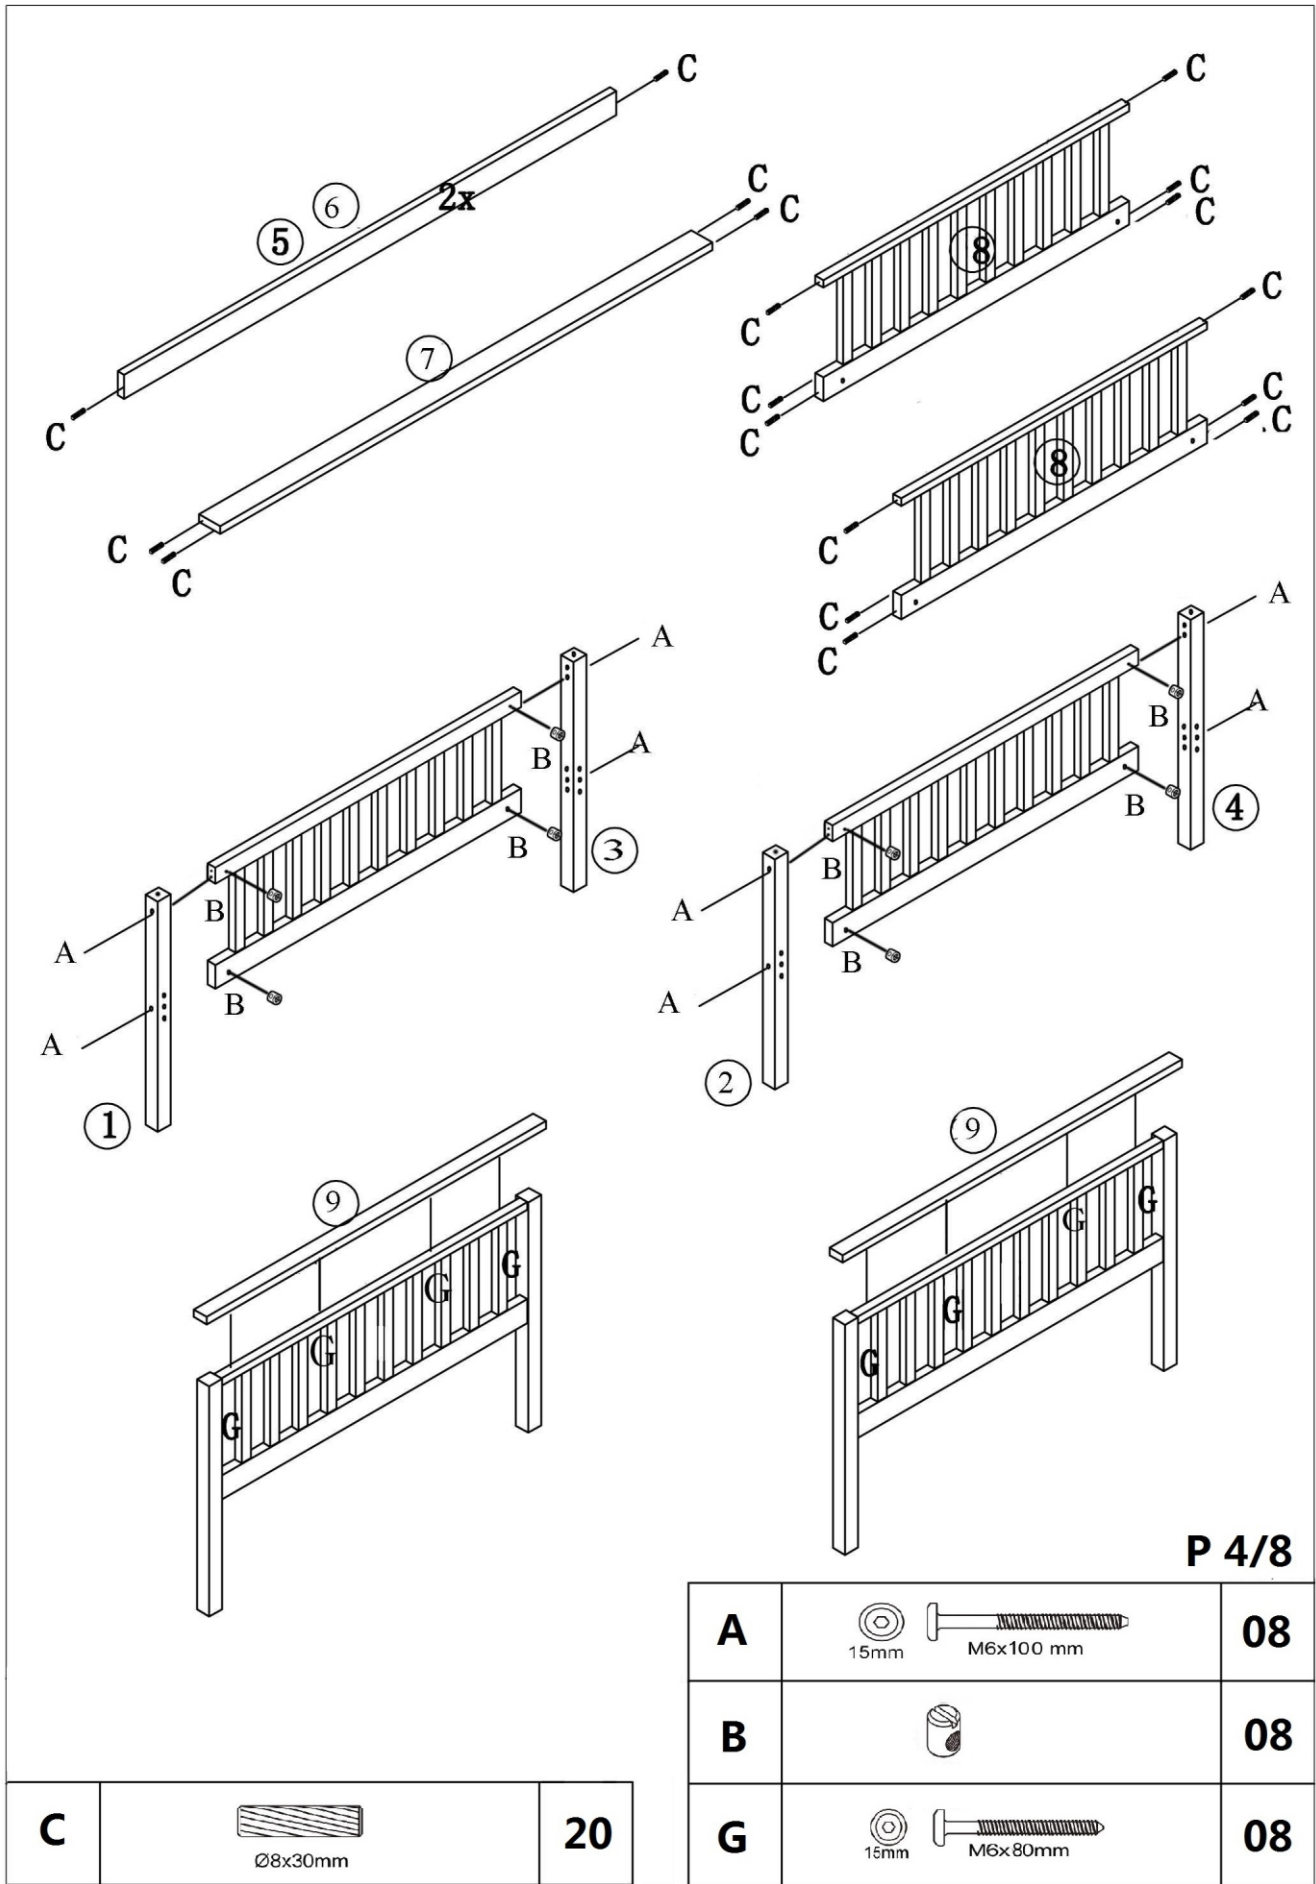

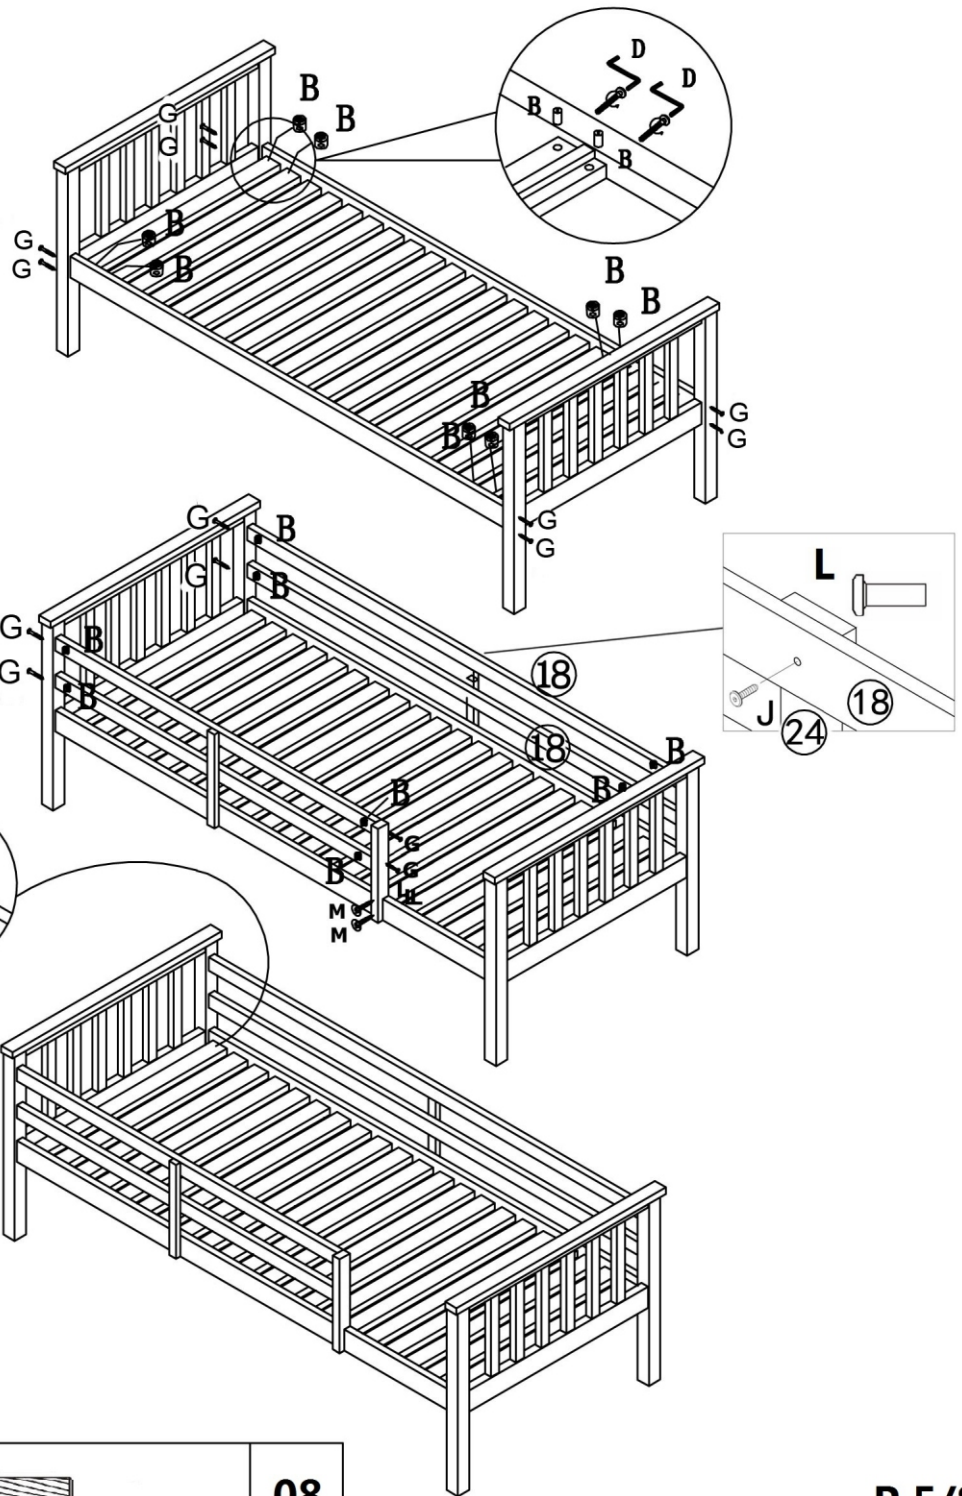





<b>C</b>	Ø8x30mm	<b>08</b>
<b>B</b>		<b>16</b>
<b>M</b>	15mm M6x50mm	<b>02</b>
<b>L</b>	15mm	<b>08</b>


<b>P 5/8</b>		
<b>G</b>	15mm M6x80mm	<b>16</b>
<b>E</b>	8mm Ø4x30mm	<b>30</b>
<b>J</b>	15mm M6x30mm	<b>06</b>

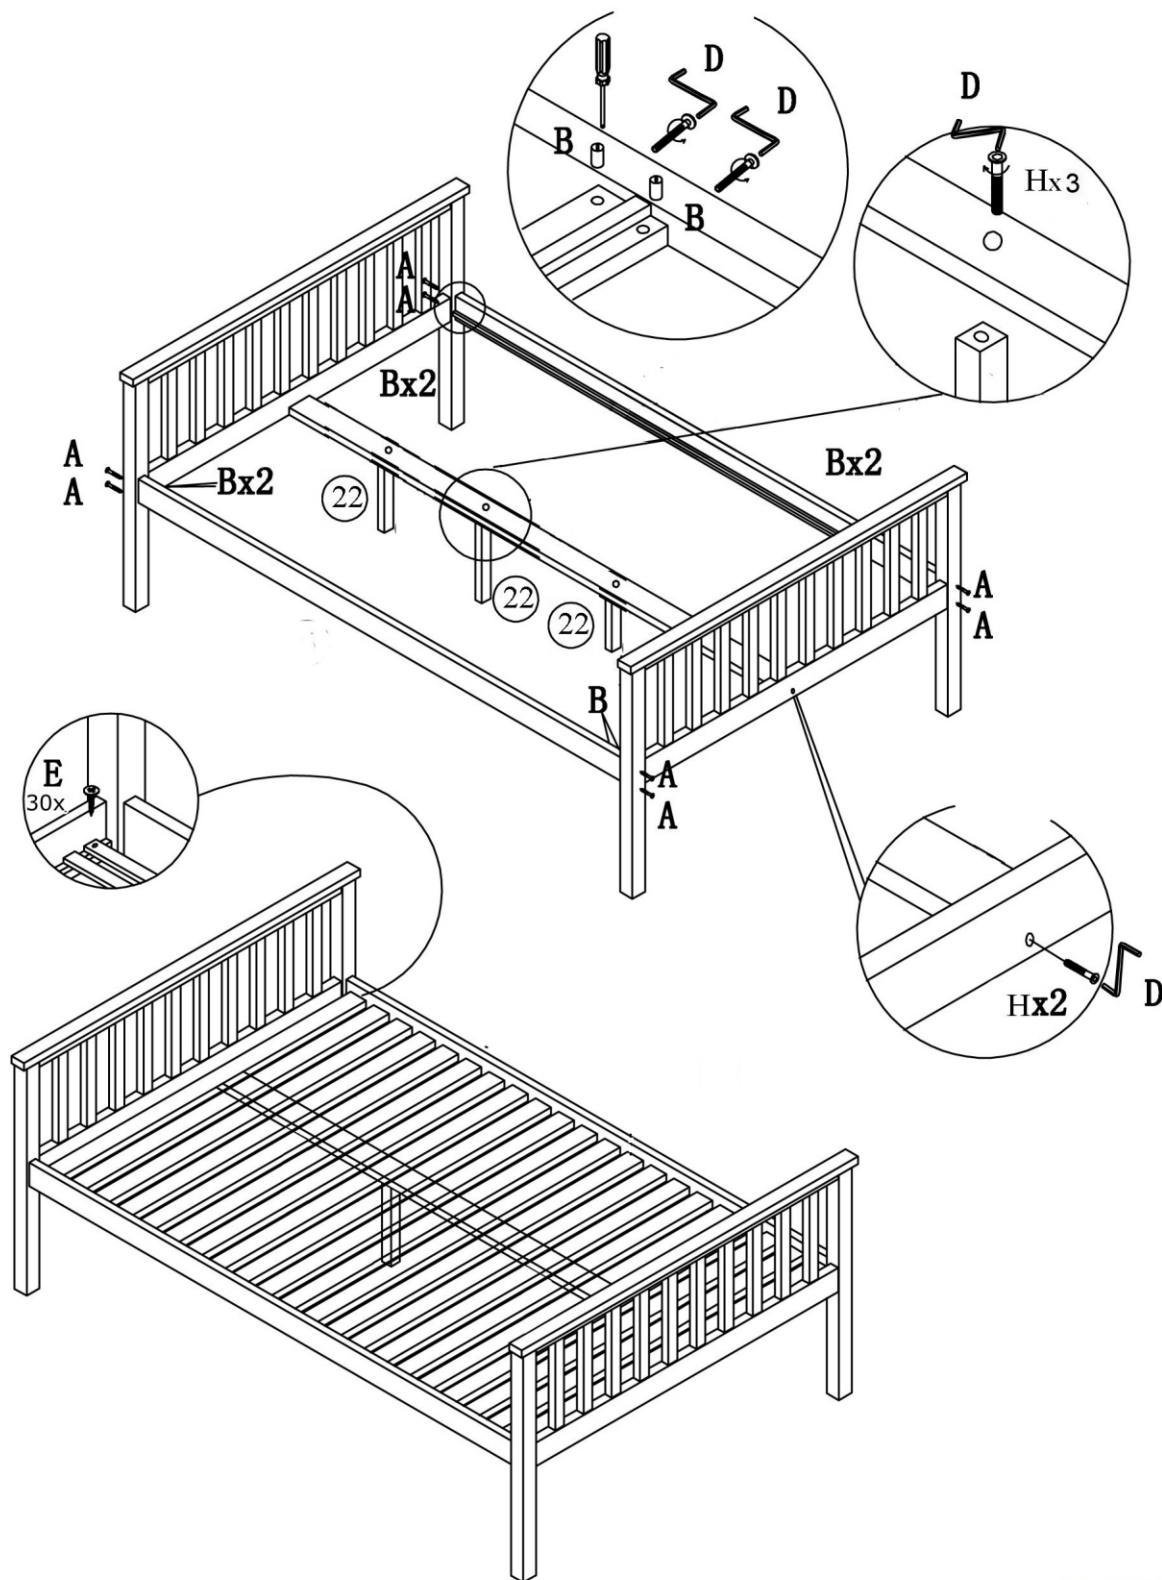


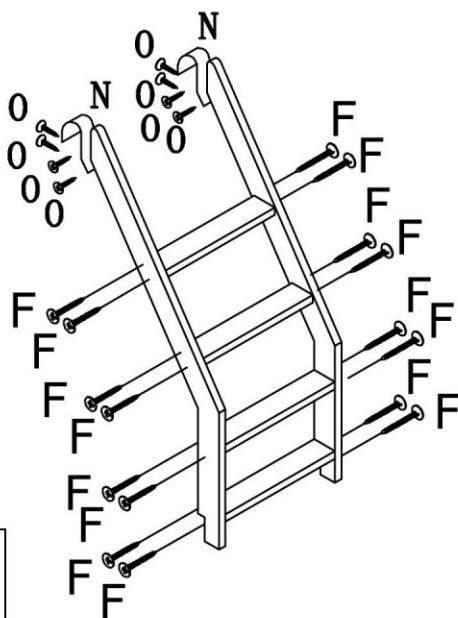
P 6/8




<b>G</b>	 15mm M6x80mm	<b>08</b>
<b>B</b>		<b>08</b>


<b>E</b>	 8mm Ø4x30mm	<b>30</b>
<b>H</b>	 10mm Ø7x60mm	<b>05</b>

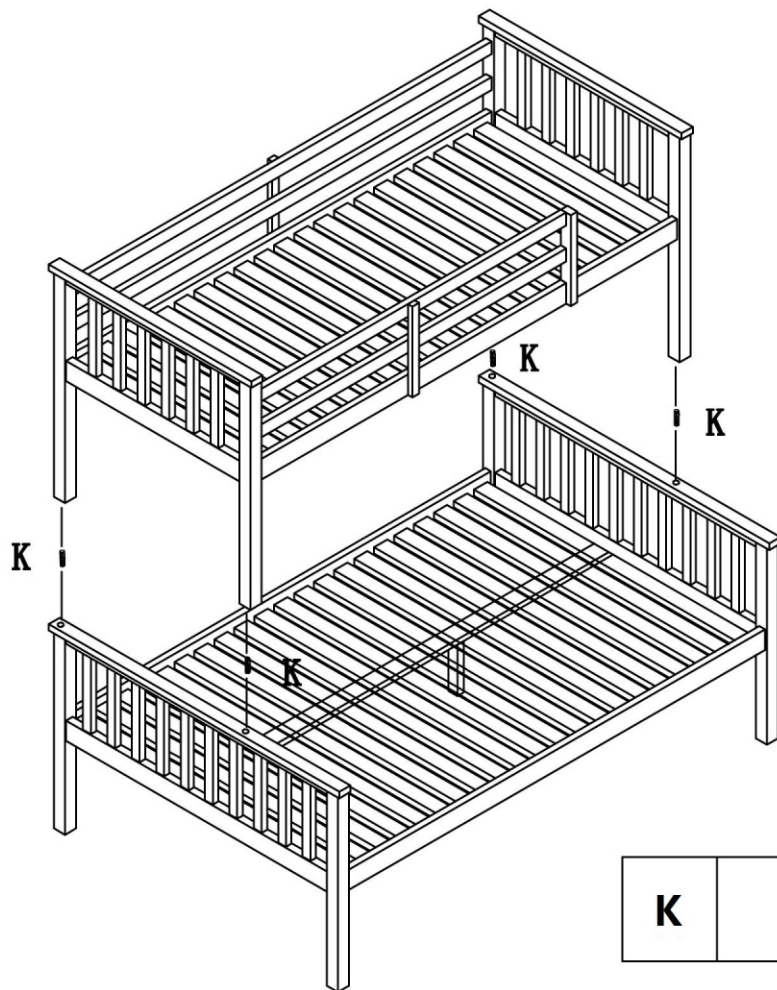






<b>K</b>	 Ø8x30mm	<b>04</b>
----------	--	-----------

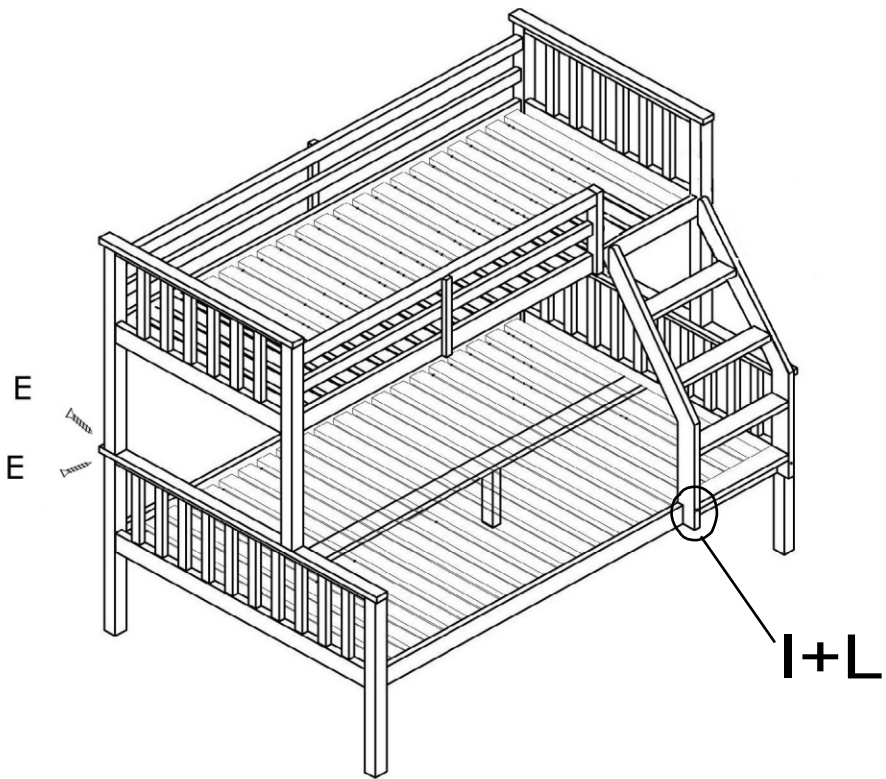

<b>F</b>	 15mm M6x70mm	<b>16</b>
<b>N</b>		<b>02</b>
<b>O</b>	 7mm Ø4x16mm	<b>08</b>



<b>E</b>	 8mm      Ø4x30mm	<b>06</b>	
<b>I</b>	 15mm	 M6x60mm	<b>02</b>
<b>L</b>	 15mm		<b>02</b>

